

The Digimax is shipped in Pro (AES/EBU) mode (Bottom). To change to Consumer (S/PDIF) mode, follow the jumper settings in the top picture. Be sure to note that the copper on the jumpers faces the direction that is shown as correct. If the jumper were to be turned 90 degrees, the unit will not operate properly (or not at all). Please note that the jumpers are black and not red. The red is just for emphasis here. Also, make sure that you change all 5 jumpers; 4 double jumpers and 1 single.

